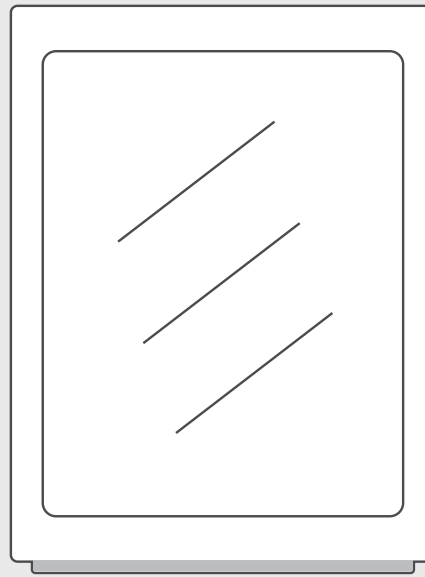


Beverage Cooler

USER MANUAL

MERV115T3AST

Warning notices: Before using this product, please read this manual carefully and keep it for future reference.
The design and specifications are subject to change without prior notice for product improvement.
Consult with your dealer or manufacturer for details.
The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER ---------- 01

SPECIFICATIONS ---------- 02

PRODUCT OVERVIEW ---------- 03

PRODUCT INSTALLATION ---------- 04

OPERATION INSTRUCTIONS ---------- 07

CLEANING AND MAINTENANCE ---------- 08


TROUBLESHOOTING ---------- 09

SPECIFICATIONS

Product model	MERV115T3AST
Volume	3.3 cu.ft.(93 L)
Rated Voltage	115 V~
Rated Frequency	60 Hz
Rated Current	1.0 A
Refrigerant	R600a
Amount	1.06 oz (30 g)
Product Dimension (W x D x H)	18.5x17.3x33.3 in(470 x 440 x 845 mm)

PRODUCT OVERVIEW

Names of components

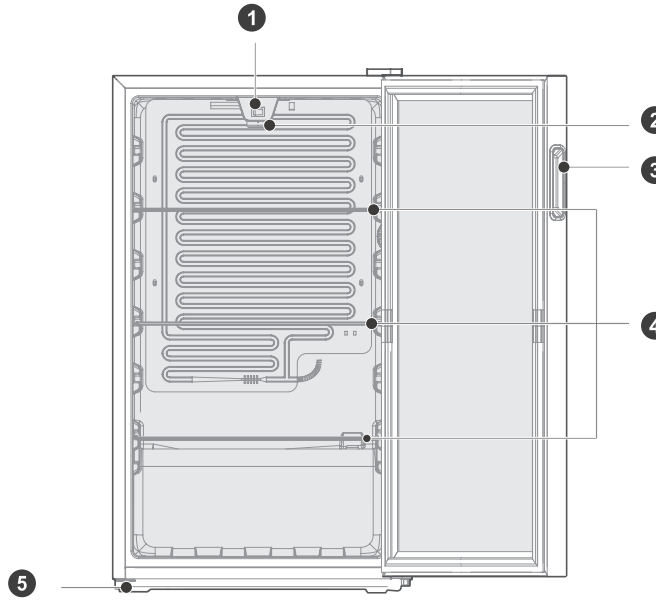

1	Light switch	**4**	Shelf
2	Temperature-control knob	**5**	Levelling foot
3	Door Handle		

ATTENTION

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor.

PRODUCT INSTALLATION


Install Instruction

Finding a suitable location

- This cooler is designed to be free standing only, and should not be recessed or built-in.
- The cooler should be placed in a well-ventilated indoor place; the ground shall be flat and sturdy .
- Keep away from heat and avoid direct sunlight. Do not place the cooler in moist or watery places to prevent rust or reduction of insulating effect.

Dimensions and Clearances

- Too small of a distance from adjacent items may result in the degradation of freezing capability and increased electricity costs. Allow over 100 mm of clearance from each adjacent wall when installing the appliance.

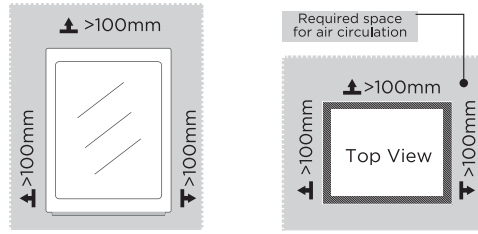

Providing a proper power supply

- Check your local power source. This cooler requires a **AC 115V, 60 Hz** power supply.
- Use a receptacle that accepts the grounding prong. The power cord is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this cooler.

⚠ CAUTION


The cooler should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.
Never unplug your cooler by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.

Start to use

- The cooler shall stay for half an hour before connecting power when it is firstly started.
- The cooler shall run 2 to 3 hours before loading fresh or frozen foods; the cooler shall run for more than 4 hours in summer in advance considering that the ambient temperature is high.


Recommended layout for beverage can in the cabinet

- Do not let the beverage can tough the back side of cooler in order to maintain good air circulation in the cabinet.
- The capacity of beverage can storage is calculated based on the standard size can 355ml(outline size Φ65mm*125mm,12oz) , oversized beverage can may impact on the number of can storage in the cabinet.

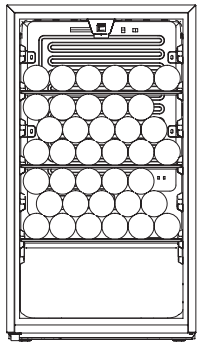


Inner row

Top shelf-6 cans
Second shelf-16 cans
Third shelf-16 cans

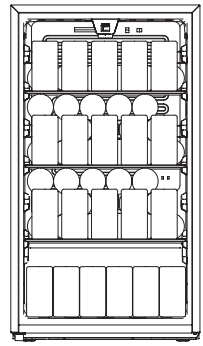


Middle row

Top shelf-5 cans
Second shelf-5 cans
Third shelf-5 cans
Base-6 cans

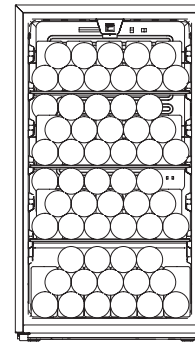

Outer row

Top shelf-11 cans
Second shelf-15 cans
Third shelf-15 cans
Base-15 cans

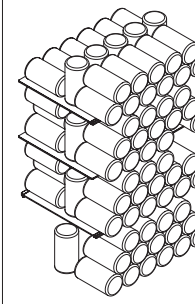

Total beverage can storage-115cans

ATTENTION


Due to different temperature zones generated due to air circulation in the beverage cooler, the upper area's temperature is higher than the low area.

Tips for energy saving


- The beverage cooler shall be placed in room dry and ventilated. The beverage cooler can not be put under direct sunlight or next to heat source(such as radiator, stove, etc.), and a suitable insulation board shall be applied if necessary.
- Try to shorten opening time of beverage cooler's door.
- Put beverage into beverage cooler after it has cooled down

Reversing the door swing


1. Change the installation location of the upper hinge (5) of the beverage cabinet, then the opening direction of the door could be changed at will. Please follow the following instructions for the change of the opening direction of the beverage cabinet's door (for instance: from right-handed door to left-handed door): close the glass door of the beverage cabinet, use a blade to remove the rivet (2) carefully, loose the mounting cover (3) of the door hinge and three positioning bolts (4) and remove the upper hinge (5).

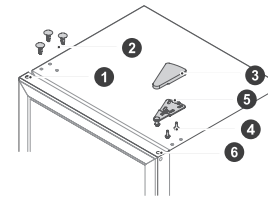


2. Open the door of the beverage cabinet and detach the glass door of which with tremendous care.

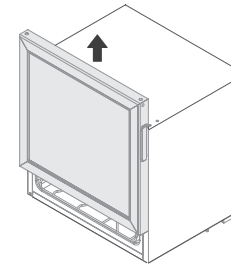


3. Dismantle the door axle sleeve (6) at lower part of the glass door, door stopper block screws (8)and door stopper (7),and fix them to left side.

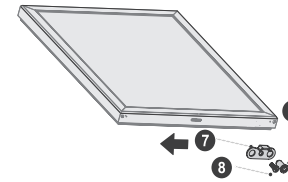

4. Dismantle the levelling foot (10), positioning bolts (4) and lower hinge (9), then exchange the parts of right and left sides and later use the reverse method to install the levelling foot and positioning bolts.

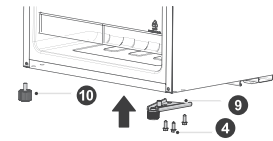

5. Put the aforesaid glass door on the lower hinge, install the door axle sleeve (6) back and fix the upper hinge (5). Align the door with the cabinet and check the tightness of gasket, and then install all the ornaments (1) (2).

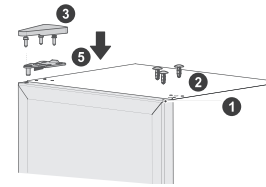


ATTENTION

The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor.

OPERATION INSTRUCTIONS

Control panel

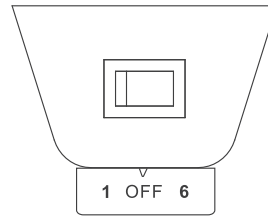

* The actual control panel may differ from model to model.

Temperature Control

The temperature inside the beverage cooler is adjusted by the temperature control knob.

- “1, 2, 3, 4, 5, 6, OFF” on the knob does not represent a specific temperature value.The smaller the number, the higher the temperature inside the beverage cooler; the higher the number, the lower the temperature inside the beverage cooler.
- “OFF” indicates that the compressor has stopped working.
- The lamp can be adjusted by a light switch.

CLEANING AND MAINTENANCE

Stop using the beverage cooler

If the beverage cooler left unused for a long time, please:

1. Unplug the beverage cooler;
2. Clean the beverage cooler;
3. Keep the beverage cooler door open.

Clean the beverage cooler

- Dusts behind the beverage cooler and on the ground shall be timely to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there are no debris.
- Clean the door gasket with a soft cloth dampened with soapy water cleaned or diluted detergent.
- The interior of the beverage cooler should be cleaned regularly to avoid odor.
- Please turn off the power before cleaning interior, remove all foods, drinks ,shelves, etc.
- Use a soft cloth or sponge to clean the inside of the beverage cooler, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean in the beverage cooler (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacterials accumulation in these areas.
- Do not use soaps, detergents, spray cleaners, etc. to clean the inside of your beverage cooler as these may create odors or contamination.
- Clean the shelves with a soft cloth dampened with soapy water or diluted detergent. Then rinse with water and dry with a soft cloth or dry naturally.
- Wipe the outer surface of the beverage cooler with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry. Do not rub or scratch the surface of the glass door to prevent the door from being broken or scratched.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives(such as toothpastes),organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the beverage cooler surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

TROUBLESHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not solved.

Problem	Possible reason
Not work	• Whether the cooler is plugged and connected to power
	• Low voltage
	• Failure power or tripping circuit.
Long-time operation of the compressor	• It is normal that cooler operates for longer time in summer when the ambient temperature is higher
	• Do not put too much beverage s in the cooler at one time;
	• Frequent opening of cooler door.
Light not work	• Whether the cooler is connected to power, whether the indicator light is damaged.
Loud noises	• Whether the floor is flat, whether the placement of cooler is stable;
	• Whether the cooler accessories are properly placed.
Over heat on sidewall	• The cooler enclosure may emit heat during running specially in summer, this is caused by the radiation of the condenser, and it is a normal phenomenon.
Surface condensation	• Condensation: condensation phenomenon will be detected on the exterior surface and door seals of the cooler when the ambient humidity is high, this is a normal phenomenon, and after wiping with towel, turns up the set temperature of the appliance properly.
Airflow sound Buzz Clatter	• Refrigerants circulating in the refrigerant lines will produce eruption of sound and grunts which is normal does not affect the cooling effect.
	• Buzz will be generated by running compressor specially when starting up or shutting down.
	• The solenoid valve or electric switch valve will clatter which is a normal phenomenon and does not affect the operation.

Midea

make yourself at home

www.midea.com

© Midea 2022 all rights reserved