currys essentials

UNDERCOUNTER LARDER FRIDGE

INSTRUCTION MANUAL
CUL55W10



CUL55W10_IB_final110505_door change.indd 2 12/05/2011 4:07 PM

Contents

Unpacking **4**

Installation **5**

Location 5

Reversing the Door Swing 5

Levelling the Unit 7

Cleaning Before Use 7

Before Using Your Unit 7

Product Overview **8**

Operation **9**

Switching On Your Unit 9

Adjusting the Temperature 9

Noises Inside the Unit! 10

Shopping for Chilled Foods 10

Tips for Keeping Food Perfect in the Unit 10

Cleaning **11**

Defrosting 11

Cleaning the Interior and the Exterior of the Unit 11

Cleaning Tips 11

Maintenance **12**

Changing the Internal Light 12

Care When Handling / Moving Your Unit 12

Servicing 12

Switching Off for Long Periods of Time 12

Disposal **12**

Specification **13**

Safety Warnings **14**

Thank you for purchasing your new Currys Essentials Larder.


We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

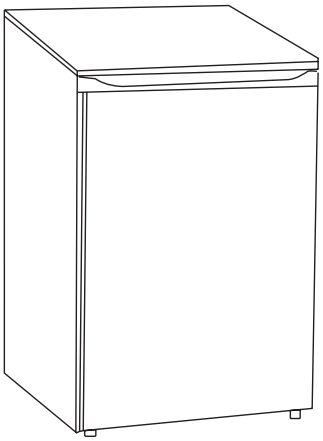


The Main Unit




Door Shelves x 2
P.N.: CJ05

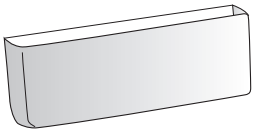


Lower Door Shelf
P.N.: CJ06



Glass Shelves x 2
P.N.: CJB07



Lower Glass Shelf
P.N.: CJB04



Salad Bin
P.N.: GCX-02



Instruction Manual
P.N.: CUL55W10-003

If items are missing, or damaged please contact Partmaster (UK only).
Tel: 0844 800 3456 for assistance.

CUL55W10_IB_final110505_door change.indd 4 12/05/2011 4:07 PM

Location

When selecting a position for your unit you should make sure the floor is flat and firm, and the room is well ventilated with an average room temperature of between 16°C and 32°C. Avoid locating your unit near a heat source, e.g. cooker, boiler or radiator. Also avoid direct sunlight as it may increase the electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly. This unit is not designed for use in a garage or outdoor installation. Do not drape the unit with any covering.

When installing the unit, ensure that 2 cm of free space is left at both sides and 3 cm at the rear of the unit. The door can be opened to the right or the left, depending on what better suits the location. Please ensure there is adequate space for the door to fully open.


- If you want to have the door swing reversed, we recommend that you contact a qualified technician. You should only try to reverse the door yourself if you believe that you are qualified to do so.
- All parts removed must be saved to do the reinstallation of the door. You should rest the unit on something solid so that it will not slip during the door change process. Do not lay the unit flat as this may damage the coolant system. Ensure the unit is unplugged and empty.

Reversing the Door Swing

Tools required: Phillips style screwdriver / Flat bladed screwdriver / Hexagonal spanner

- Ensure the unit is unplugged and empty.
- Adjust the two levelling feet to their highest position.
- To take the door off it is necessary to tilt the unit backwards. You should rest the unit on something solid, e.g. a chair just below the top panel.
- All parts removed must be saved to do the reinstallation of the door. You should rest the unit on something solid so that it will not slip during the door reversing process.
- Do not lay the unit flat as this may damage the coolant system.
- We recommend that 2 people handle the unit during assembly.


1. Tilt the unit carefully. 2 people are required to tilt the unit during the door reversing process.

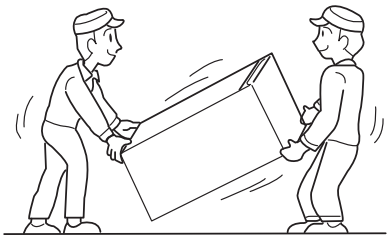


CUL55W10_IB_final110505_door change.indd 5 12/05/2011 4:07 PM

INSTALLATION


2. Remove the screws and hinge bracket from the base.

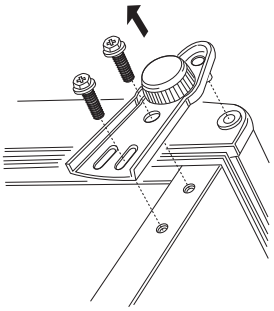


3. Slide the door down and remove away from the unit.

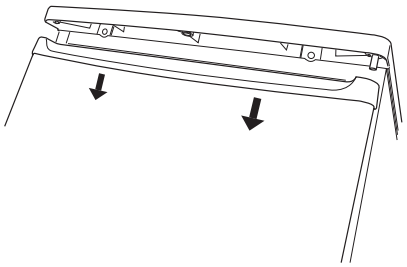


4. Remove the top hinge pin inside the door and refit on the opposite side.

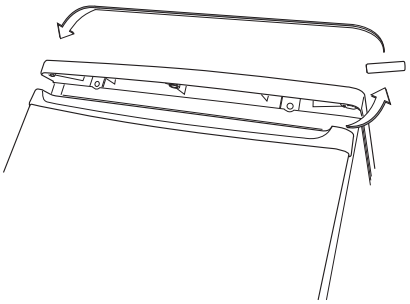

5. Slide the door back on to the top hinge. Screw the bottom hinge into place on the new side.

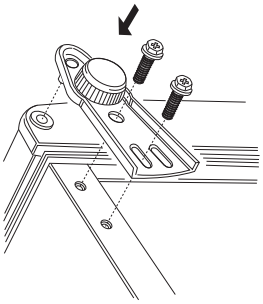

6. Check that the door is aligned horizontally and vertically and that the seals are closed on all sides before finally tightening the bottom hinge. Re-adjust the levelling feet.

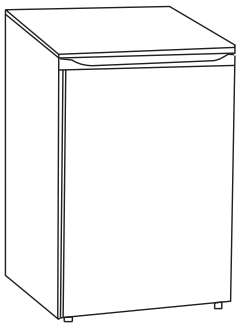


CUL55W10_IB_final110505_door change.indd 6 12/05/2011 4:07 PM

Levelling the Unit

To do this use the two levelling feet at the front of the unit.

If the unit is not level, the door and magnetic seal alignments will not be covered properly.

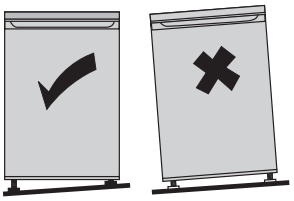

Cleaning Before Use

Wipe the inside of the unit with a weak solution of bicarbonate soda. Then rinse with warm water using a 'wrung-out' sponge or cloth. Wash the shelves and salad bin in warm soapy water and dry completely before replacing in the unit. Clean the exterior of the unit with a damp cloth.

If you require more information refer to the **Cleaning** section.


- **Before Plugging in YOU MUST**
  Check that you have a socket which is compatible with the plug supplied with the unit.
- **Before Turning On!**
  Do not turn on until two hours after moving the unit. The coolant fluid needs time to settle.

Before Using Your Unit

Before placing any food in your unit, turn it on and wait for 24 hours, to make sure it is working properly and to allow it time to fall to the correct temperature. Your unit should not be overfilled.

CUL55W10_IB_final110505_door change.indd 7 12/05/2011 4:07 PM


Product Overview

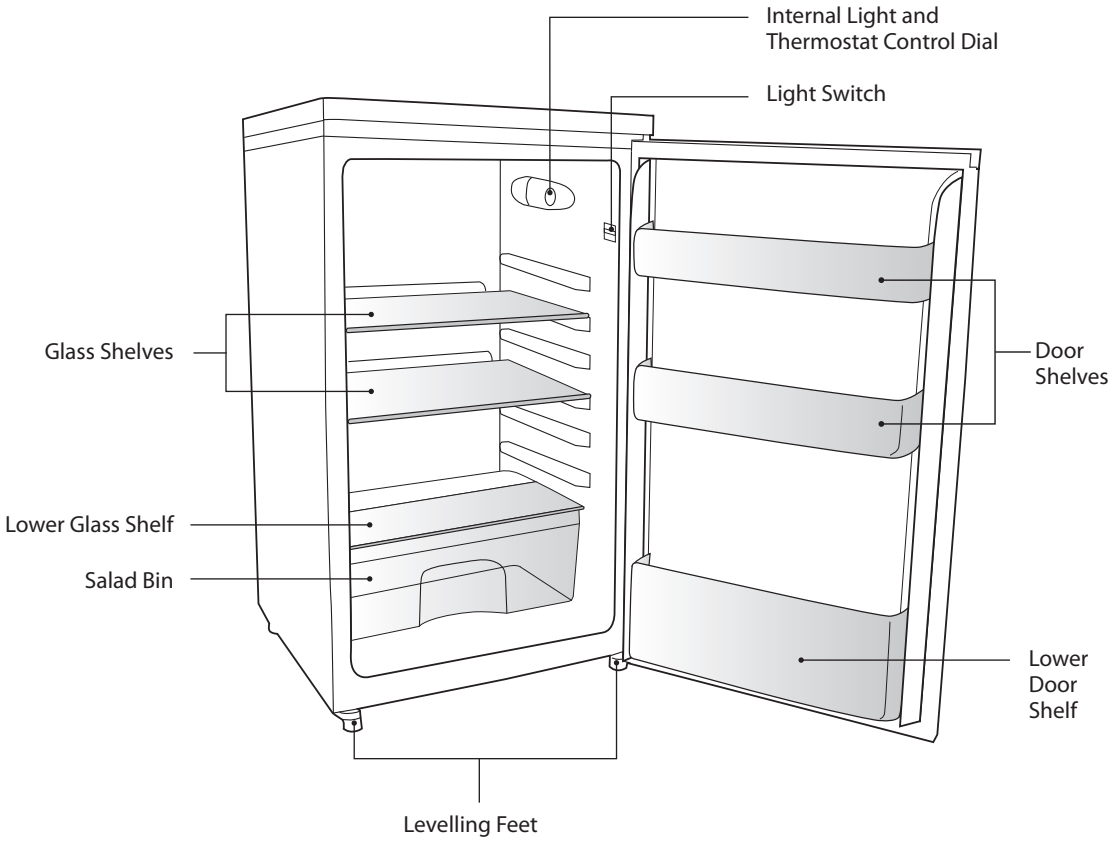

CUL55W10_IB_final110505_door change.indd 8 12/05/2011 4:07 PM


Operation

Switching On Your Unit

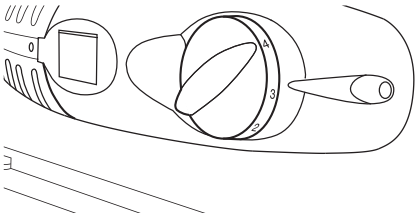

1. Before connecting the unit to the mains supply make sure that the thermostat control dial is set at position **0**. This is located on the right side of the cabinet. Connect the mains cable to the mains socket.
2. Adjust the thermostat control dial to the desired position, bear in mind that the higher the number, the lower the temperature. Position **4** is the recommended setting when operating at normal room temperature (between 16°C and 32°C).
3. The unit may not operate at the correct temperature if it is in a particularly hot or a particularly cold room, or if you open the door often.
4. To ensure that the unit is cool enough to sufficiently chill your food wait 24 hours before filling it with food.
5. If you are concerned that your unit is not being kept cold enough and wish to check the temperature you will need a special fridge/freezer thermometer. These are available from most supermarkets and hardware shops.

   Place the thermometer in the centre of the unit, where it can be read easily. Leave overnight, the temperature in the unit should be an average of 5°C.

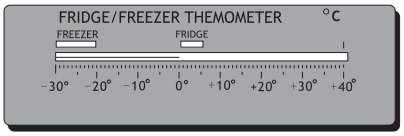

Adjusting the Temperature

The internal temperature of the unit is controlled by a thermostat. The recommended position is between 1 to 4 for colder working environments (i.e. during winter) and between 5 to 6 for hotter environments. Please adjust according to the environment.

CUL55W10_IB_final110505_door change.indd 9 12/05/2011 4:07 PM

Noises Inside the Unit!

You may notice that your unit makes some unusual noises. Most of these are perfectly normal, but you should be aware of them!

These noises are caused by the circulation of the refrigerant liquid in the cooling system. It has become more pronounced since the introduction of CFC free gases. This is not a fault and will not affect the performance of your unit. This is the compressor motor working, as it pumps the refrigerant around the system.

Shopping for Chilled Foods

- Take a quick look at the chilled food package and make sure it is in perfect condition.
- Try to keep chilled food together whilst shopping and on the journey home as this will help to keep the food cold.
- Don't buy chilled food unless you can chill it straight away. Specially insulated bags can be bought from most supermarkets and hardware shops. These bags can keep chilled food cold for longer while transporting.
- Food that has been left in a car or at room temperature for a prolonged period of time could raise the food temperature to a dangerous level, which allows harmful bacteria to grow.
- Always unpack and place chilled food in the unit before storing dry food.

Tips for Keeping Food Perfect in the Unit

- Cooked meats/fishes should always be stored on a shelf above raw meats/fishes to avoid bacterial transfer. Keep raw meats/fishes in a container which is large enough to collect juices and cover it properly. Place the container on the lowest shelf.
- Leave space around your food, to allow air to circulate inside the unit. Ensure all parts of the unit are kept cool.
- To prevent transfer of flavours and drying out, pack or cover the food separately. Fruit and vegetables do not need to be wrapped.
- Always let pre-cooked food cool down before you put in the unit. This will help to maintain the internal temperature of the unit.
- To prevent cold air escaping from the unit, try to limit the number of times you open the door. We recommend that you only open the door when you need to put food in or take food out.

CUL55W10_IB_final110505_door change.indd 10 12/05/2011 4:07 PM

Cleaning


Defrosting

Frost might build up in the unit after the it has been used for a period of time. Scrape away the frost using a plastic scraper.

Do not use a metal or sharp instrument to scrap away the frost, nor should you use any electrical appliances to aid defrosting.

We recommend that defrosting should be carried out when the frost layer builds up to 3cm (~1.18”). Choose a time when the stock of frozen food is low, follow these procedures:

1. Take out the food, turn the unit off at the mains supply and leave the door open.
2. Place a shallow bowl or pan below the unit. Scrap away the frost using the plastic scraper. Defrosting the remaining frost can be speeded up by placing a bowl of hot water inside the unit and closing the door. As the solid frost loosens, scrap it away with the plastic scraper and remove.

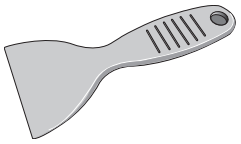

3. When defrosting is complete, clean your unit’s interior and exterior.

Cleaning the Interior and the Exterior of the Unit

- Remove all the shelves and the salad bin. To remove the salad bin first remove the lower door shelf.
- Wipe the inside of the unit with a weak solution of bicarbonate soda and then rinse with warm water using a ‘wrung-out’ sponge or cloth. Wipe completely dry before replacing the shelves and salad bin.
- Use a damp cloth to clean the exterior, and then wipe with a standard furniture polish. Make sure that the door is closed to avoid the polish getting on the magnetic door seal or inside the unit.
- The grille of the condenser at the back of the unit and the adjacent components can be vacuumed using a soft brush attachment.


Cleaning Tips

Condensation may appear on the outside of the unit. This maybe due to a change in room temperature. Wipe off any moisture residue. If the problem continues, please contact a qualified technician for assistance.

CUL55W10_IB_final110505_door change.indd 11 12/05/2011 4:07 PM

Maintenance

Changing the Internal Light

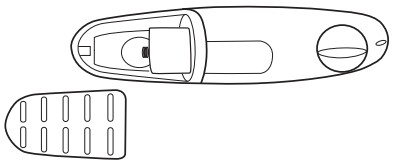

1. Before carrying out the bulb replacement always adjust the thermostat control dial to Position 0, then disconnect the mains supply.
2. Hold and unscrew the light bulb cover.
3. Remove the plastic light bulb cover.
4. Remove the old bulb by unscrewing in an anti-clockwise direction.
5. Replace with a new bulb (10W SES). Please make sure that it is secure in the bulb cover.
6. Refit the light bulb cover and reconnect the unit to the mains supply and switch on.

Care When Handling / Moving Your Unit

Hold the unit around its sides or base when moving it. Under no circumstances should it be lifted by holding the edges of the top surface.

Servicing

The unit should be serviced by an authorised engineer and only genuine spare parts should be used. Under no circumstances should you attempt to repair the unit yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction. Contact a qualified technician.

Switching Off for Long Periods of Time

When the unit is not in use for a long period of time, disconnect it from the mains supply, empty all food and clean the appliance, leaving the door ajar to prevent unpleasant smells.

Disposal

Old units still have some residual value. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again. The refrigerant used in your unit and insulation materials require special disposal procedures. Ensure that none of the pipes on the back of the unit are damaged prior to disposal.

Up to date information concerning options of disposing of your old unit and packaging from the new one can be obtained from your local council office.

When disposing of an old unit break off any old locks or latches and remove the door as a safeguard.

CUL55W10_IB_final110505_door change.indd 12 12/05/2011 4:07 PM

Specification

Model	CUL55W10
Overall Dimension (W x D x H)	544 x 570 x 845mm
Total Gross Volume	127L
Fresh Food Storage Compartment Volume	126L
Defrosting Type	Manual Defrost
Storage Temperature	0-8 °C, average ≤ 4°C
Energy Consumption	0.41kWh / 24h
Energy Grading	A
Rated Voltage	230V~
Rated Current	0.7A

Features and specifications are subject to change without prior notice.

CUL55W10_IB_final110505_door change.indd 13 12/05/2011 4:07 PM

Safety Warnings

For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

- Read all instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party, make sure to include this manual.
- Keep ventilation openings in the appliance enclosure clear of obstructions.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the unit, unless they are of the type recommended by the manufacturer.
- If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or a qualified technician in order to avoid a hazard.
- Choose a location for your unit away from heat sources such as radiators or fires as refrigerant and vesicant are burnable.
- Young children should be supervised to ensure that they do not play with the unit.
- Do not damage the refrigerant circuit (applicable only for appliances with refrigeration circuits which are accessible to the user).
- The unit must be maneuvered by a minimum of 2 persons.
- This unit is not intended for use by persons (including children) with reduced sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the unit by a person responsible for their safety.
- If your unit is fitted with a lock to prevent children being trapped inside, keep the key out of reach and not in the vicinity of the unit.
- Do not store volatile or flammable substances in the unit.

WARNING



IT IS HAZARDOUS FOR ANYONE OTHER THAN AUTHORISED SERVICE PERSONNEL TO CARRY OUT SERVICING OF REPAIRS WHICH INVOLVE THE REMOVAL OF COVERS.



TO AVOID THE RISK OF AN ELECTRICAL SHOCK DO NOT ATTEMPT REPAIRS YOURSELF.

CUL55W10_IB_final110505_door change.indd 14 12/05/2011 4:07 PM

eco ideas

	Normal energy consumption	Increased energy consumption
Installation site	In a ventilated room. Protected from direct sunlight. Not situated near to a heat source (radiator, oven). Where the ideal ambient room temperature is approx 20°C.	In an enclosed, unventilated room. In direct sunlight. Situated near to a heat source (radiator, oven). Where there is a high ambient room temperature.
Use	Only open the doors when necessary and for as short a time as possible. Store food in an organised way. Allow hot food and drinks to cool down before placing them in the unit. Store food covered or packaged. Do not over-fill the appliance to allow air to circulate.	Frequent opening of the doors for long periods will cause a loss of coldness. If food is not stored in an organised way, searching for an item will mean the door is open for longer. Placing hot food in the unit will cause the compressor to run for a long time, as the unit will have to work harder to lower the temperature. The evaporation or condensation of liquids will cause a loss of coldness in the unit.

CUL55W10_IB_final110505_door change.indd 15 12/05/2011 4:07 PM

NOTE: If you require a replacement for any of the items listed below, please quote their corresponding part numbers:

Replacement Part	Part Number
Door Shelf	GJ05
Lower Door Shelf	GJ06
Glass Shelf	CJB07
Lower Glass Shelf	CJB04
Salad Bin	GCX-02

Partmaster.co.uk

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

DSG Retail Ltd • Maylands Avenue • Hemel Hempstead
Herts • HP2 7TG • England

(P.N.: CUL55W10-003)