Criterion®

USER MANUAL



UPRIGHT FREEZER

17 CU FT.
CAPACITY

BEFORE USING YOUR PRODUCT:
Please read this manual carefully & follow all safety rules & operating instructions. Keep this manual for future reference.

Model Number:
CUF17C1W

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

LOCATION

- Two people should be used when moving the appliance.
- Remove interior and exterior packaging prior to installation. Wipe the outside of the appliance with a soft, dry cloth and the inside with a lukewarm wet cloth.
- Place the appliance on a floor that is strong enough to support it when it is fully loaded.
- Do not place the appliance in direct sunlight or near sources of heat, such as a stove or heater, as this can increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance to perform improperly.
- Do not use the appliance near water, for example in a wet basement or near a sink.
- This appliance is intended for household use only.
- Before connecting the appliance to a power source, let it stand upright for approximately 6 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- This appliance is 71.0 cm (27.95 inches) wide by 172.8m (68.03 inches) high by 80.9 cm (31.85 inches) deep. Make sure that you leave the minimum amount of space between the appliance and all surrounding walls and vents. Do not cover any of the ventilation openings with any material as the appliance needs adequate space to breathe.
- Allow 12.7 cm (5 inches) of space between the back, sides and top of the appliance and all adjacent walls.
- This appliance is intended for free-standing installation only and is not intended to be built into a cabinet or counter. Building in this appliance can cause it to malfunction.

OPERATING INSTRUCTIONS

FEATURES

1. Display panel (FRONT)
2. Windward
3. Glass shelf1
4. Downwind
5. Glass shelf2
6. Basket
7. Adjustable Feet
8. Door shelf

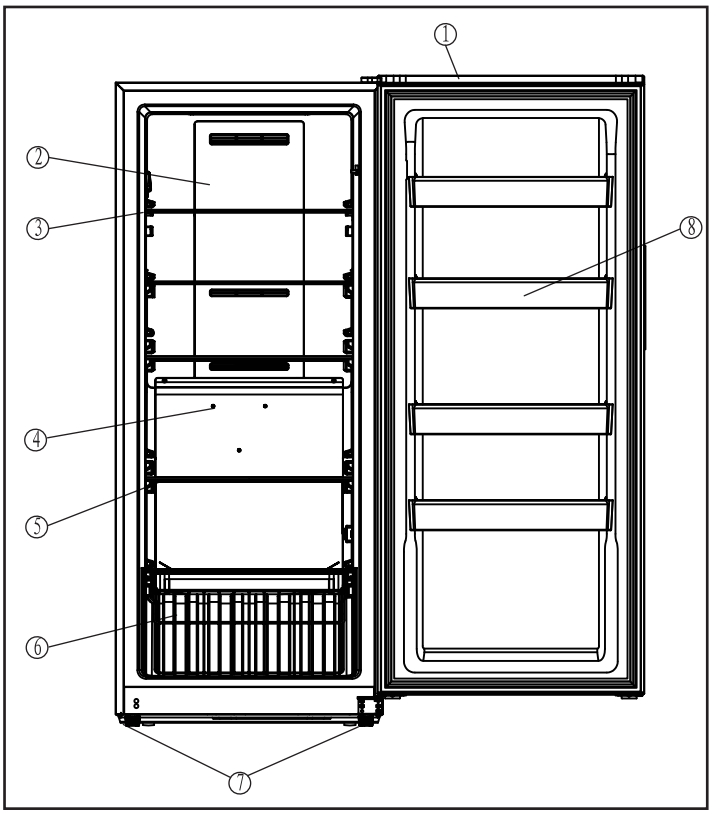

LEVELING INSTRUCTIONS

There are two adjustable legs on the bottom of the appliance that can be turned up or down to ensure that the appliance is level.

1. Turn the leveling leg counter-clockwise as far as it will go, until the top of the foot is touching the bottom of the chassis.
2. Slowly turn the leveling leg clockwise until the appliance is level.

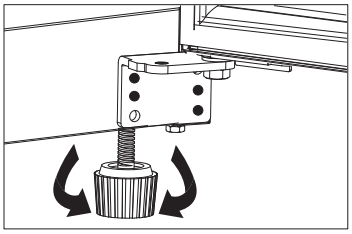

OPERATING INSTRUCTIONS

CONTROL PANEL

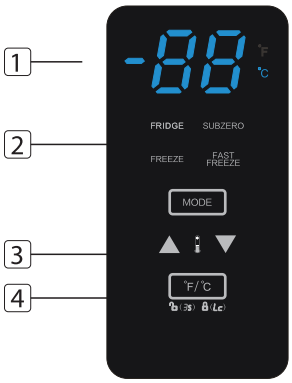

1.Temperature display

2.Temperature Mode

3.Up and Down arrows to select temperature

4.Selection button for °F or °C (press and hold for 3 seconds to activate the control panel)

LOCK AND UNLOCK

After no operation for two minutes, the control panel will be deactivated. The appliance will beep and flash "Lc" once, and then the display will be dimmed.
Press any key will firstly show "Lc" if control panel was locked and then will switch to temperature display. At this moment, press and hold "F/C" for three seconds. The appliance will beep and flash display temperature once, then the control panel activated.

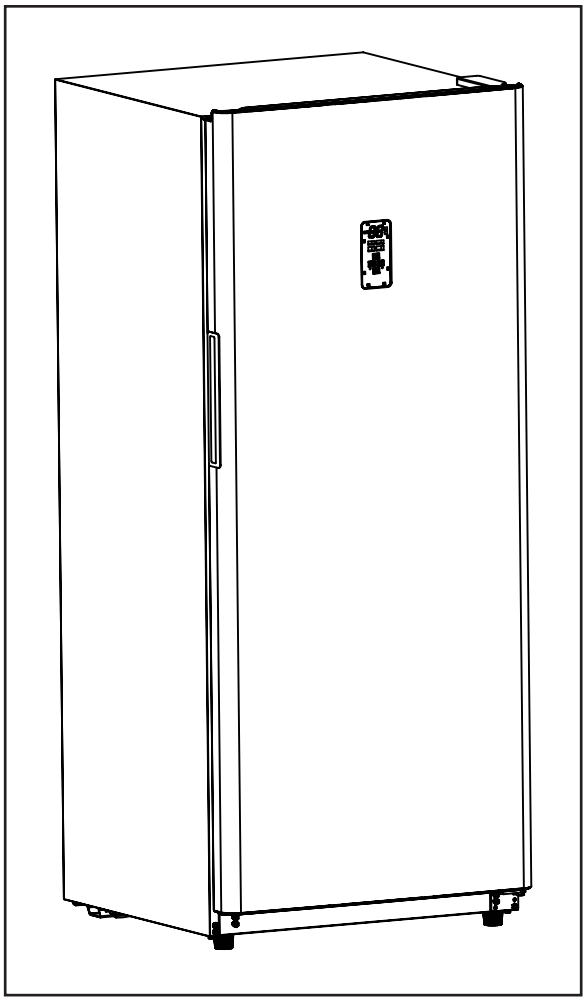

TEMPERATURE SETTING

This appliance can be used as either a refrigerator or a freezer. The table below shows the MODE and temperature ranges. Select the MODE. Then set the desired temperature by pressing the Up and Down arrows on the Control Panel. The temperature increases or decreases in one degree increments. The display window will show the selection.

TEMPERATURE SCALE

"FRIDGE" : 0℃~8℃ (32°F~46°F)
"SUBZERO" : -4℃~-8℃ (25°F~18°F)
"FREEZE" : -14℃~-24℃(7°F~-11°F)
"FASTFREEZE" : -28℃(-18°F)

OPEN DOOR ALARM

This appliance is equipped with a door alarm that will sound if the door is left open for more than 3 minutes. The alarm will beep and the display will flash continuously until the door is closed.

CARE & MAINTENANCE

CLEANING

Ensure the appliance is unplugged before cleaning.

- To clean the inside of the appliance, use a soft cloth and a solution of a tablespoon of baking soda to one quart of water or a mild soap solution or some mild detergent.
- Wash removable shelves in a mild detergent solution, then dry and wipe with a soft cloth.
- Clean the outside with a soft, damp cloth and some mild detergent.
- It is important to keep the area clean where the door seals against the cabinet. Clean this area with a soapy cloth. Rinse with a damp cloth and let dry.

Note: Do not use cleaners containing ammonia or alcohol on the appliance. Ammonia or alcohol can damage the appearance of the appliance. Never use any commercial or abrasive cleaners or sharp objects on any part of the appliance.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, take the proper steps to protect your contents.

Note: Wait 3 to 5 minutes before attempting to restart the refrigerator if operation has been interrupted.

DEFROST

This unit is equipped with an automatic defrost function and does not require manual defrosting. Defrost water from the appliance is channeled into a drip tray located above the compressor. Heat transfer from the compressor causes the defrost water to evaporate.

ERROR CODES

- E1: The freezer sensor failure
- E2: Freezer defrosting sensor failure
- E3: The freezer sensor failure and freezer defrosting sensor failure
- C0: Communication failure
- dr: Door opening alarm
- EH: Freezer high temperature
- EL: Freezer low temperature
- H1: The freezer heater failure

VACATION

- Short vacations: Leave the appliance operating during vacations of less than three weeks.

- Long vacations: If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly, blocking it open if necessary.

ENERGY SAVING TIP

The appliance should be located in the coolest area of the room, away from heat producing appliances, and out of direct sunlight. Do not overload the unit or block any ventilation openings.

MOVING

- Remove all items.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket or similar item.
- If the appliance is placed on its back or side during transportation, upon reaching the destination, allow it to remain in its operating position for 6 hours to avoid damage to internal components.

DISPOSAL

This appliance may not be treated as regular household waste, it should be taken to the appropriate waste collection point for recycling of electrical components. For information on local waste collection points, contact your local waste removal agency or government office.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE
No power	• A fuse may be blown or the circuit breaker tripped • Plug not fully inserted into the wall outlet
Internal temperature not cold enough	• Temperature setting is too warm • Door is not shut properly or opened excessively • Exhaust vent is obstructed • Recently added a large quantity of wa rm food to the cabinet • Close proximity to heat source or direct sunlight • Ambient temperature or humidity is very high
Appliance runs continuously	• Temperature setting is too cold • Door not shut properly or opened excessively • Exhaust vent is obstructed • Recently added a large quantity of wa rm food to the cabinet • Close proximity to heat source or direct sunlight • Ambient temperature or humidity is very high
Internal temperature is too cold	• Temperature setting is too cold
Noises	• Parts are expanding and/or the refrigerant is circulating; this is no rmal