ASKO



INSTRUCTIONS FOR USE
REFRIGERATOR WITH FREEZER
EN

RBB276DND1
RBB276SND1

Contents

Introduction 3
Welcome to our growing ASKO family! 3
Important notes and precautions 4
Before using the appliance for the first time 4
Important safety instructions 4
Important information on the use of appliance 6
Installation and connection 8
Selecting the location 8
Connecting the appliance 9
Changing the side on which the door opens / building the appliance into a cupboard 9
Before using the appliance for the first time 10
Before you use the appliance for the first time 10
Energy-saving advice 10
Description of the appliance 11
Drawers 12
Door compartments 12
Glass shelves 13
MultiBox 13
Operating the appliance 14
Control panel 14
Switching the appliance on/off 15
Adjusting the temperature in the appliance 15
Intensive cooling (super cool) 15
Eco function 16
Holiday mode (prolonged absence) 17
Party mode 17
Sabbath function (Sabbath mode) 18
Wi-Fi function 19
High temperature alarm 19
Open door alarm 20
Power outage/power supply failure alarm 20
Storing and freezing food 21
Recommended distribution 21
Avoid contamination of food 21
Storing fresh food in the refrigerator 21
Freezing and storing foods in the freezer 22
Thawing frozen food 23
Maintenance 24
Defrosting the appliance 24
Cleaning the appliance 24
Faults 25
Faults table 25
Service 28
Right to Repair 29
Spare parts 30
Environmental aspects 31
Disposal of packaging and appliance 31
Compliance information 32

Welcome to our growing ASKO family!

We are proud of our appliances. We hope that this appliance will be an appreciated and dependable aid for many years to come.

Please read the operating instructions before use. They include general tips, information about the settings and adjustments you can make, and the best way to take care of your appliance.

⚠ WARNING!

Read the safety instructions before using the appliance!

Read these instructions thoroughly before you first use the appliance, and keep the instructions for future use.

Link to the EU EPREL database

Information about your product can be found at www.asko.com/energylabel, where you will also find a link to the European Product Database for Energy Labelling, EPREL. Or else visit https://eprel.ec.europa.eu directly. Follow the instructions to search by model name (see the information on the serial number plate).

The following symbols are used throughout the manual and they have the following meanings:

INFORMATION!

Information, advice, tip, or recommendation

⚠ WARNING!

Warning – general danger

DANGER OF FIRE!

Warning; risk of fire / flammable materials

Before using the appliance for the first time

Before connecting the appliance to the power mains, please read carefully the instructions for use which describe the appliance and its correct and safe use. The instructions apply to several appliance types/models; thus, settings or equipment may be described herein which is not available in your appliance. We recommend saving this instruction manual for future reference and attach it to the appliance if it is sold in the future.

Check for any damage or irregularities on your appliance. If you find your appliance is damaged, notify the retailer from which you have purchased the appliance.

Allow the appliance to stand upright for at least 4 hours before you connect the appliance to the mains. This reduces the risk of malfunctions resulting from transport effects on the refrigerant unit.

Important safety instructions

⚠ DANGER OF FIRE!

WARNING! Risk of fire/flammable materials.

The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations.

WARNING! Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Before cleaning the appliance, unplug it from the power mains (unplug the power cord from the wall outlet).

⚠ ELECTRIC SHOCK!

WARNING! If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ ELECTRIC SHOCK!

WARNING! When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ ELECTRIC SHOCK!

If LED lighting does not work, call a service technician. Do not attempt a repair of the LED lighting yourself, as there is danger of contact with high voltage!

⚠ WARNING!

WARNING! Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

⚠ WARNING!

WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

⚠ WARNING!

WARNING! To avoid any hazard resulting from poor stability of the appliance, make sure it is installed as instructed.

Freeze burn hazard

To avoid freeze burn, never put frozen food in your mouth and do not touch frozen food.

Safety of children and vulnerable persons

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Remove the packaging intended to protect the appliance or particular parts during transport and keep it outside the reach of children. It presents danger of injury or suffocation.

When removing a used appliance, disconnect the power cord, remove the door, and leave the shelves in the appliance. This will prevent children from locking themselves in the appliance.

For European markets only

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

Warning regarding the refrigerant

The appliance contains a small amount of an environmentally friendly yet flammable gas R600a. Make sure that no parts of the cooling system are damaged. A gas leak is not hazardous to the environment, but it could cause eye injury or fire.

In case of a gas leak, ventilate the room thoroughly, disconnect the appliance from the power mains, and call a service technician.

Important information on the use of appliance

WARNING! This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;

- catering and similar non-retail applications.

⚠ WARNING!

WARNING! Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

The appliance may not be used outdoors and it may not be exposed to rain.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

If the appliance will be out of use for an extended period of time, switch it off using the relevant button, and unplug it from the power mains. Empty the appliance, defrost it, clean it, and leave the door ajar.

In case of an error or power supply failure, do not open the freezer compartment unless the freezer has not operated for over 16 hours. After this period, use the frozen food or provide sufficient cooling (e.g. a replacement appliance).

Technical information on the appliance

Rating plate can be found in the appliance interior. It indicates data on voltage, gross and net volume, type and amount of refrigerant, and information on the climate classes.

If the language on the rating plate is not the language of your choice or the language of your country, replace it with the one supplied.

⚠ WARNING!

WARNING! Do not damage the refrigerant circuit.

Selecting the location

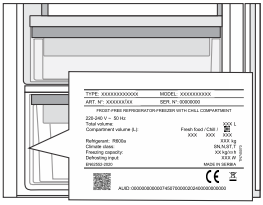

- Place the appliance in a dry and well aired room. The permitted ambient temperature range for the appliance depends on the appliance's climate class, which is shown on the type plate.

- Do not place the appliance near a source of heat, such as a gas cooker, radiator or boiler, etc., and do not expose it to direct sunlight.

Description	Class	Ambient temperature range °C	Relative humidity
Extended temperate	SN	+10 to +32	≤75%
Temperate	N	+16 to +32	
Subtropical	ST	+16 to +38	
Tropical	T	+16 to +43	

⚠ WARNING!

Do not place the appliance in a room where the temperature can fall below 5 °C: the appliance may not work properly or become defective!

⚠ WARNING!

The appliance is not suitable for outdoor use and it may not be exposed to rain.

- The appliance must be placed at a distance of at least 5 cm from an electrical or gas cooker and at least 30 cm from a radiator or heater. An insulation panel must be fitted when these distances cannot be kept.
- The appliance must be placed at least 5 cm away from the wall or the back of the cabinet. A kitchen cupboard above the refrigerator must have a gap of at least 5 cm between the back of the cupboard and the wall. This is needed to make sure that there is sufficient cooling air for the condenser.
- The plug of the installed appliance must remain accessible!

⚠ WARNING!

Place the appliance in a room with a sufficient volume of air. The room must have a volume of at least 1 m^3 of air for every 8 grams of refrigerant. The quantity of refrigerant is shown on the type plate on the inside of the appliance.

- The kitchen unit in which the appliance is to be built in must have an opening of at least 200 cm^2 in its base to allow sufficient air to circulate.
- The appliance's air outlet is at the top. Make sure that the outlet is not blocked. Blocking the outlet can result in damage to the appliance.

⚠ WARNING!

When installing the appliance side-by-side into kitchen cabinets, each appliance should be integrated into a separate cabinet.

Connecting the appliance

- Connect the appliance to the power supply with a plug. The socket must be earthed. The nominal voltage and frequency required for the appliance are shown on the appliance's type plate/label with basic information.
- The appliance must be connected to the mains and earthed in accordance with the prevailing standards and regulations. The appliance can withstand small variations in the mains voltage to a maximum of plus or minus 6%.

⚠ WARNING!

When you are not going to use the appliance for a longer period then switch it off with the appropriate key and disconnect it from the mains. Empty, defrost and clean the appliance, and leave the door ajar.

Changing the side on which the door opens / building the appliance into a cupboard

Information about changing the side on which the door opens and building the appliance into a cupboard is enclosed in separate installation instructions.

Before you use the appliance for the first time

Do not connect the appliance to the mains until you have carefully read the instructions for the correct and safe use of the appliance. As these instructions are for various types and models, it is possible that the instructions for use refer to settings or parts that are not available on your appliance. We recommend that you keep these instructions for future use. If you sell the appliance, enclose them with the appliance.

Inspect the appliance for damage and/or irregularities. If the appliance is damaged, contact the store that sold you the appliance.

Allow the appliance to stand upright for at least 4 hours before you connect the appliance to the mains. This reduces the risk of malfunctions resulting from transport effects on the refrigerant unit.

Before using the appliance for the first time, the interior and all internal accessories should be cleaned with lukewarm water and a neutral cleaning agent. Wipe the cleaned parts with a cloth with clean water and then dry them thoroughly.

If you use the appliance for the first time, do not put food into the appliance until the temperature has decreased to the set temperature.

Energy-saving advice

- Install the appliance as stated in the instructions for use.
- Do not open the door more than necessary.
- Never cover or obstruct the ventilation openings.
- Replace a door seal that is damaged or no longer seals properly as quickly as possible.
- Store food in well-sealed containers or suitable packaging.
- Allow food to cool to room temperature before you put it in the appliance.
- Defrost food in the refrigerator compartment.
- Space the shelves evenly in the refrigerator compartment. Place the food so that the air can circulate freely in the appliance (follow the recommendations for the location of foods enclosed in the instructions).
- The lower the set temperature, the higher the power consumption.

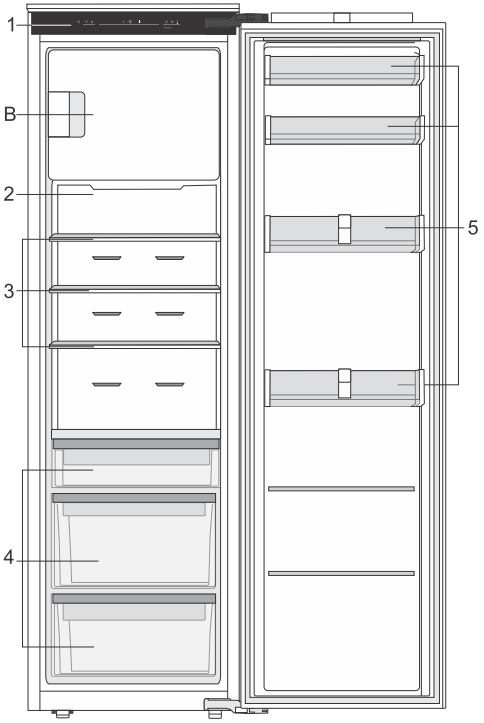

1. Control panel
2. Air distribution system
3. Glass shelves
4. Nordic fresh drawers
5. Door compartments

B Freezer

Air distribution system

The advanced ventilation system evenly distributes the air and equalises the temperature throughout the entire cooling section. It also ensures optimal air circulation and the best conditions for storing your food.

Door closure (Soft Close)

The door closes itself once the opening angle is less than 20°. The soft-close door mechanism closes the door gently.

LED interior lighting

The appliance has LED lighting at various locations.

Drawers

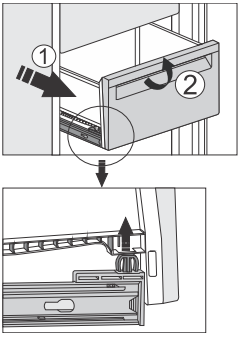

Many drawers are mounted on telescopic movable guides.

To pull the drawer out of the guides, pull it out completely. Lift the drawer at the front to remove it from the latch and then pull it out completely.

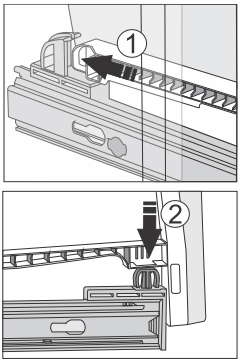

To insert the drawer into the guides, pull both guides out fully. Align the drawer with the guides and push it into the groove on the back of the guide. Then slide the drawer down at the front to latch it onto the telescopic guide.

Door compartments

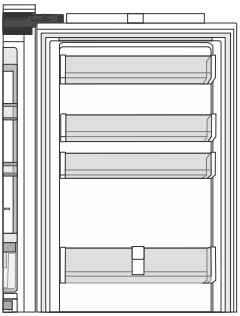

The height of the door compartments is adjustable. Lift the compartment out of the groove and fit it in the required position. Each compartment can carry a maximum weight of 5 kg.

The lower door compartment is suitable for bottles and has a slider attached with which you can fix the bottles so that they cannot move uncontrollably.

Glass shelves

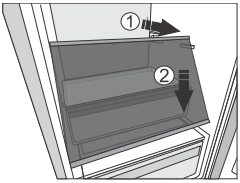

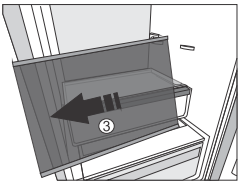

Empty shelves can be rearranged as you see fit across the guides in the appliance interior. To move or remove them from the appliance, slightly lift them at the back, pull them towards you, push them down at the front and then move or pull them out of the appliance. Store quickly perishable food at the back of the shelf where the temperature is the lowest.

MultiBox

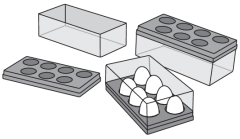

The MultiBox offers a handy option for storing foods with a strong odour, such as ripe or blue cheese, smoked sausages and onions, etc.

If the tray is used as an egg tray, place it directly on the bottom of a door shelf.

If the tray is used as an ice tray, fill it with water and place it in the freezer in a horizontal position.

Control panel

INFORMATION!

- For best results, touch the keys with as much of the fingertip as possible.

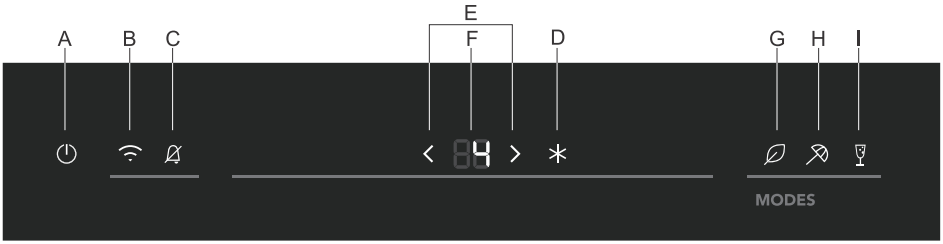

A. Appliance on/off key

B. WiFi function on/off key

C. Acoustic alarm off key

Refrigerator

D. SuperCool key (intensive cooling function)

E. Temperature setting keys

F. Set temperature display

Special functions

G. Eco function on/off key

H. Long absence on/off key (Holiday mode)

I. Party mode on/off key (Party Mode)

C.+I. Sabbath mode (switch ‘On’ or ‘Off’)

Switching the appliance on/off

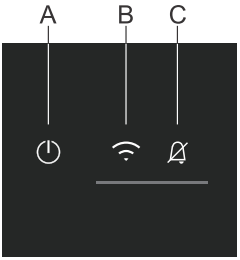

When you connect the appliance to the power mains for the first time, the appliance will be in standby mode (switched off, but powered).

Switching on the appliance: switch on the appliance by pressing **A**.

Switching off the appliance: switch off the appliance by pressing the **A** key and holding it (for 3 seconds). The appliance will switch to standby mode (it remains powered).

Adjusting the temperature in the appliance

INFORMATION!

- The factory default setting is the recommended temperature of 4 °C.
- After the appliance is switched on, it may take several hours until the set temperature is reached. Do not place any food into the appliance before the temperature drops to the selected setting.

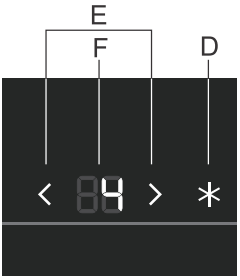

Temperature in the **refrigerator compartment** can be set with the keys **E**.

Increase temperature

Decrease temperature

- Refrigerator compartment temperature can be set in the range from +3°C to 9°C.
- Each time you press one of the keys **E** you increase or decrease the setting by 1 °C. After three seconds of inactivity, the setting is automatically saved as the last set temperature of the refrigerator compartment.
- Recommended temperature setting is 4°C.

Intensive cooling (super cool)

This appliance has a fast cooling function. This function decreases the temperature in the refrigerator compartment as quickly as possible. This is ideal for cooling foods that have just been put into the refrigerator. Use this function when you put a large quantity of food in the appliance.

INFORMATION!

When the intensive cooling function is selected, the appliance works at maximum capacity. It may then make more noise for a while.

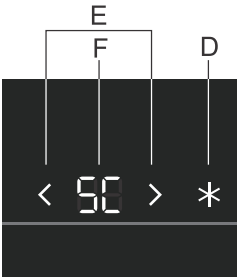

- Press and hold **D**.
  - The display shows »**SC**«, to indicate that the SuperCool function is activated.
- To deactivate the function, press and hold **D**.
  - The set temperature is once again shown in the displays.

WARNING!

Adjusting the temperature of the refrigeration compartment while the intensive cooling function is activated will immediately disable the intensive cooling function.

WARNING!

When the intensive cooling function is not manually disabled, the function will be automatically disabled after about seven hours. The temperatures then return to the latest temperature settings.

WARNING!

Should a power failure occur while the function is activated then the function will be activated again when the power is restored.

Eco function

This appliance has an ECO function. When the ECO function is selected, the appliance works with the optimum settings. The ECO function has no time limit and remains activated until the function is disabled.

Activating/disabling the ECO function

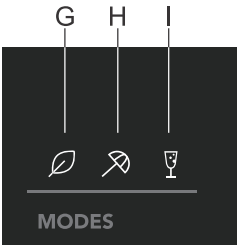

- Press and hold **G**.
  - The lighting of the touch key comes on: the function is activated.
- To deactivate the function, press and hold **G**.
  - The function is disabled.

⚠ WARNING!

Activating the ECO function disables the SuperCool function.

⚠ WARNING!

Should a power failure occur while the ECO function is activated then the function will be activated again when the power is restored.

Holiday mode (prolonged absence)

Use this function when you are away for a long period of time, for example when you are going on holiday or taking a long business trip.

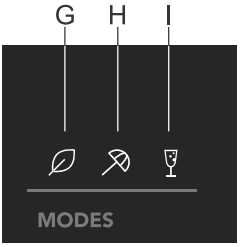

- Press and hold **H**.
  - The lighting of the touch key comes on: the function is activated.
  - When this function is activated, the refrigerator compartment temperature will be set to 15°C.

⚠ WARNING!

Before activating this function, empty the refrigerator compartment, as any perishables left in this compartment may spoil.

- To deactivate the function, press and hold **H**.
  - The function is disabled.

Party mode

In Party mode, set all compartments to maximum cooling. Use this function when you want to cool large amounts of food and drink during the day.

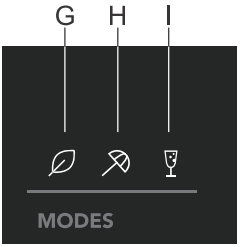

- Press and hold **I**.
  - The lighting of the touch key comes on: the function is activated.
  - **SC** will appear on the display **F**.
- To deactivate the function, press and hold **I**.
  - The function is disabled.

⚠ WARNING!

The function will also be deactivated when you change the refrigerator compartment temperature setting, or activate any of the other special functions.

⚠ WARNING!

When the Party mode is not manually disabled, the function will be automatically disabled after about 24 hours. The temperature then returns to the latest temperature setting.

Sabbath function (Sabbath mode)

Sabbath mode is active for 72 hours after activation. All illuminated features and the display will be temporarily disabled. In the meantime, the appliance's cooling system is working normally.

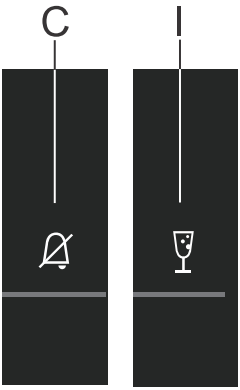

- Press and hold **C** and **I**.
  - The touch keys will light up: the function is activated.
- To deactivate the function, press and hold **C** and **I**.
  - The function is disabled.

⚠ WARNING!

If any error occurs during Sabbath mode, it won't be showed until Sabbath mode is deactivated.

Wi-Fi function

You can control this device remotely with your smartphone. If the device is not connected to your home network, it functions in the same way as a conventional device.

Connecting your appliance to the application ConnectLife

ConnectLife it is a smart home platform that connects people, devices, and services. The **ConnectLife** application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features vary depending on your appliance and your region/country).

To connect your smart device, you need a home Wi-Fi network (only 2.4 GHz networks are supported) and a smartphone with the application **ConnectLife**.

To download the **ConnectLife** application, scan the QR code or search for **ConnectLife** in your favorite app store.

1. Install the **ConnectLife** application and create an account.
2. In the **ConnectLife** application, go to the "Add device" menu and select the appropriate type of device. Then scan the QR code (it can be found on the rating plate of the appliance; you can also enter the AUID/SN code manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

Do you have more questions? Visit us at **www.connectlife.io** or contact us at **hello@connectlife.io**.

Cancelling all pairings

By activating this function, the appliance will be removed from all paired app user accounts.

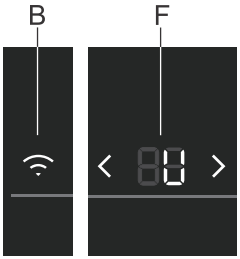

- Press and hold **B** for 9 seconds until the display **F** shows **U**.
- The function will terminate automatically after successful removal of all pairings in the cloud.

High temperature alarm

A signal will sound when the temperature in the appliance is too high. The display **C** and **HI** on the display start to flash.

High temperature can be caused by several reasons:

- The door of the relevant compartment may have been opened for too long or too frequently.
- The door does not seal properly.
- Too much fresh food has been put in at the same time.

⚠ WARNING!

Every time you switch on the appliance, a 24-hour delay in alarm operation is activated. If the appliance fails to reach a sufficiently low temperature after this period, the alarm will be activated.

Stopping the alarm

1. Press **C**.
   - The acoustic alarm will go off. The current measured temperature of the compartment begins to flash on the display unit.
   - The next time you press **C** the set temperature of the compartment starts to flash and will continue to flash as long as the high temperature alarm is active.
   - When the appliance reaches an adequate temperature, the temperature display will stop flashing, and the display **C** will go out.

Open door alarm

An alarm signal sounds when the door is open for too long. The following key lights up **C**.

Stopping the alarm

1. Close the door.
   - The alarm will stop sounding.

⚠ WARNING!

If you turn off the alarm only by pressing **C**, the alarm will switch on again after some time because the door is still open.

Power outage/power supply failure alarm

If the temperature in the appliance reaches the alarm level during a power failure, then the high temperature alarm will be activated once power supply is restored. The alarm will sound and the display will flash **PF**.

Stopping the alarm

1. Press **C**.
   - The acoustic alarm will go off. The current measured temperature of the compartment begins to flash on the display unit.
   - The next time you press **C**, you cancel the alarm after power failure.

If the high temperature alarm is activated at the same time, it will operate as described in the chapter High temperature alarm, after you have deactivated the power supply failure alarm.

Recommended distribution

Sections of the refrigeration compartment

- Top drawer: Fish and meat.
- Bottom drawer: Fruit and vegetables.

INFORMATION!

Store food that spoils rapidly at the back of a shelf or at the back of the drawer at the lowest temperature.

WARNING!

Do not store fruit (bananas, pineapples, papaya, citrus fruits) and vegetables (courgettes, tomatoes, aubergines, cucumber, sweet peppers and potatoes) that are sensitive to low temperatures in the refrigerator.

Sections of the door

- Top/middle door compartment: eggs, butter, cheese and sauces, etc.
- Bottom door compartment: drinks, cans and bottles, etc.

Sections of the freezer compartment

- Freezing and storing frozen food.

WARNING!

Do not store lettuce, eggs, apples, pears, grapes, peaches, yoghurt, buttermilk, sour cream or mayonnaise in the freezer.

Avoid contamination of food

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Regularly clean surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Storing fresh food in the refrigerator

Important recommendations for storing fresh food

- To ensure the quality of fresh food, it is important that:
  - the food is well-packaged;

- the appliance is at the correct temperature;
- the appliance is clean.

- Take good note of the use-by date stated on the food packaging.
- Put food in the refrigerator in sealed containers or in suitable packaging. This will prevent the food from picking up or spreading odours and will keep it dry.
- Do not store flammable, unstable or explosive materials in the refrigerator.
- Store bottles that have been opened upright and close them tightly.
- Some organic solutions, such as essential oils, in the skin of lemons and oranges, and butyric acid, that come into long-term contact with plastics can eat into the material and cause premature ageing.
- A disagreeable odour is an indication that the appliance is not clean or that it contains food that has spoiled (see the chapter 'Maintenance').
- Take perishable foods out of the refrigerator when you will be away from home for a longer time.

Freezing and storing foods in the freezer

Important recommendations for freezing fresh food

- The maximum quantity of food that you can put in the freezer in one go is stated on the type plate. Putting more than this maximum quantity of food into the freezer will slow the freezing process and reduce the quality. Moreover, this will also harm the quality of frozen food already stored in the freezer.
- Use only good-quality fresh food that is suitable for freezing.
- Allow hot food to cool to room temperature.
- Food needs to be frozen quickly. It is recommended that you use small packs.
- Use air and watertight packaging to prevent the food from drying out and lose its vitamins.
- Note the type and quantity of the food on the packaging, together with the date on which it was frozen.
- Do not allow fresh food to come into contact with frozen food.

Important recommendations for storing frozen food

- Follow the manufacturer's instructions for the storage and use of frozen food. Take note of the recommended storage temperature and use-by date stated on the packaging.
- Use only food in undamaged packaging that has been stored at a temperature of -18 °C or lower.
- Do not buy food covered in frost. This indicates that the food has thawed or partially thawed several times and, as a result, is of inferior quality.
- Make sure that the food does not thaw during transport. An increase in its temperature will shorten the storage life and harm the quality of the food.

Recommended storage times of frozen food in the freezer ****

Type of food	Storage life
Fruit, beef	10 to 12 months
Vegetables, veal, poultry	8 to 10 months
Venison	6 to 8 months
Pork	4 to 6 months
Finely chopped or minced meat	4 months
Bread, pastas, cooked dishes, whitefish	3 months
Offal	2 months
Smoked sausage, bluefish	1 month

Thawing frozen food

- Thawing is an important step in storing food preserved by freezing. Food must be thawed in the correct way.
- Suitable methods of thawing food are:
  - in the refrigerator;
  - in cold water;
  - in a microwave or conventional oven with a suitable thaw program.
- Some frozen products can be prepared without needing to thaw them first. The manufacturer will state this on the packaging.
- The food needs to be packed in small portions. In this way the food thaws faster.
- Use partially or completely thawed food as quickly as possible. The bacteria in thawed food are reactivated and the food will spoil rapidly. This applies in particular to fruit, vegetables and ready-made food.
- Do not refreeze partially or completely thawed food.

Defrosting the appliance

Automatic defrost of the refrigeration compartment

The refrigeration compartment defrosts automatically from time to time.

Cleaning the appliance

⚠ WARNING!

Switch off the appliance and remove the plug from the socket before you start cleaning it.

⚠ WARNING!

Do not use abrasive cleaning agents, as they can damage the surface.

- Regularly clean the interior of the appliance with lukewarm water. If so required, add a neutral cleaning agent or special refrigerator cleaner to the water. Clean all surfaces with a soft cloth. Wipe the cleaned parts with a cloth with clean water and then dry them thoroughly.
- Do not put parts of the appliance in a dishwasher: this could damage them.

⚠ WARNING!

When you are not going to use the appliance for a longer period then switch it off with the appropriate key and disconnect it from the mains. Empty, defrost and clean the appliance, and leave the door ajar.

Faults table

When you have any doubts about whether your appliance is working properly you should not immediately assume that it is defective. We recommend that you should in any case check the points in the following table.

Problem	Cause/Solution
Appliance is connected to the power mains but it does not work.	• Make sure there is voltage in the power outlet and that the appliance is switched on.
Appliance cools continuously for a long time.	The compressor is operating for a longer time at low capacity (low energy consumption / high efficiency). This is the most efficient form of operation. The following factors can also influence the appliance's operation: • The ambient temperature is too high. • The door has been opened for too long or too frequently. • The door is not properly closed. • The door does not seal properly (the seal is dirty, the door is misaligned or the seal is damaged, etc.). • Too much fresh food has been put in at the same time. • Insufficient air circulation around the compressor and condenser. Check that the ventilation around the appliance is sufficient (see the separate installation instructions). • The sensor in the refrigerator is blocked by fresh food. Make sure that air can circulate freely around the sensor (not applicable to all models).
Excessive ice formation in the freezer.	• The door has been opened for too long or too frequently. • The door is not properly closed. • The door does not seal properly (the seal is dirty, the door is misaligned or the seal is damaged, etc.).
Condensation on the glass shelf above the drawers in the refrigeration compartment.	• Check that the door is closed properly and seals properly. • This is a temporary problem that cannot be avoided entirely in periods of high ambient temperatures and high humidity. The problem disappears when the temperature and humidity return to normal levels. We recommend that you clean the drawers more frequently and occasionally wipe off any drips. • Pack food in bags or other air-tight packaging.
Door does not open easily.	You are trying to open the appliance's door just after you have closed the door. Then opening the door is difficult. When you open the door, cold air escapes from the appliance and is replaced by warm air from the surroundings. As this air cools a slight vacuum is created that makes it more difficult to open the door. The situation returns to normal after a few minutes, and the door opens easily again.
Some or all of the LED lighting does not work.	• If LED lighting does not work, call a service technician.

Table continued from last page

Problem	Cause/Solution
	• Do not attempt a repair of the LED lighting yourself, as there is danger of contact with high voltage! • This product contains a light source of energy efficiency class G.
Appliance makes a noise.	• The appliance is cooled by a refrigeration system with a compressor (and with some models, also a fan) that makes a noise. The noise level depends on the installation of the appliance, its correct use and its age. • When you connect the appliance to the power supply the noise made by the compressor or flowing refrigerant may be slightly louder. This is not indicative of a defect, and has no effect on the service life of the appliance. The appliance will make less noise after a while. • The appliance may be temporarily noisier after the door has been opened for too long or too frequently, a large quantity of fresh food has been put in the appliance or the intensive freezing or intensive cooling function has been activated.
The display shows error code E0.	• Communication error from power board to user interface electronics. • Call a service centre for repair. Until the appliance is repaired by a service technician, the appliance will operate in safe mode. The appliance will automatically preserve the most suitable temperature.
The display shows error code E8.	• Communication error from user interface electronics to power board. • Call a service centre for repair. Until the appliance is repaired by a service technician, the appliance will operate in safe mode. The appliance will automatically preserve the most suitable temperature.
The display shows error code E9.	The sensor of the refrigerator door is malfunctioning. Call a service centre for repair.
The display shows error code F1.	The cooling compartment fan is malfunctioning. Call a service centre for repair. The appliance cannot operate normally. Transfer the food to a cool place and switch off the appliance.
The display shows error code F2.	The condenser fan is malfunctioning. Call a service centre to fix the problem. The appliance cannot operate normally. Transfer the food to a cool place and switch off the appliance.
The display shows error code t1.	Refrigerator compartment temperature sensor error or fault. Call a service centre for repair. Until the appliance is repaired by a service technician, the appliance will operate in safe mode. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code t3.	The DuraFresh compartment temperature sensor is malfunctioning. Call a service centre for repair. Until the appliance is repaired by a service technician, it will operate in safe mode. The appliance will automatically maintain the most suitable temperature for each compartment.

Table continued from last page

Problem	Cause/Solution
The display shows error code t4.	Ambient temperature sensor is malfunctioning. Call a service center to fix the problem. The appliance will operate in safe mode until it is repaired by a service technician. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code t7.	Evaporator sensor of the refrigerator is malfunctioning. Call a service center to fix the problem. The appliance will operate in safe mode until it is repaired by a service technician. The appliance will automatically maintain the most suitable temperature for each compartment.
The display shows error code 81.	The WiFi module is malfunctioning. Call a service centre to fix the problem.

If you are unable to solve the problem then contact the service centre. When you do so, state the type, model and serial number shown on the type plate or label on the inside of the appliance.

Service

If you have encountered a problem that you cannot resolve, please contact your nearest service centre for professional help – details available at www.asko.com. Our website also has information about the availability of spare parts and what you can repair yourself.

You will need to provide the details stated on the serial number plate. Include the article number and the serial number.

Please note that non-professional repairs may pose a safety risk to the user and affect the warranty.

In European Union Member States and European Economic Area States, consumers have the right to choose, at their own discretion, between an authorized repairer and an independent repairer. However, where the consumer chooses an independent repairer, the seller and/or the manufacturer shall not be liable for any product safety risks or infringements of intellectual property rights resulting from interventions carried out by the independent repairer, nor shall they be responsible for any loss of guarantee or warranty rights arising from objective or legitimate reasons attributable to improperly performed repairs.

For sales contracts concluded with consumers within European Union Member States and European Economic Area States, on or after 31 July 2026, according to the Right to Repair Directive ((EU) 2024/1799), the following consumers' rights apply.

- Right to choose repair
- Extension of the legal guarantee

This information reflects the minimum level of consumer protection established by the Right to Repair Directive. EU Member States may introduce more extensive consumer rights at the national level. Where national legislation provides a higher level of protection, such national provisions shall prevail.

Additional information provided by the manufacturer is available at: www.asko.com.

Spare parts

Functional spare parts for the purchased appliance will be available for at least 15 years from the date the last unit of the model was placed on the market. During this time, original spare parts will be available to ensure the correct operation of your appliance. A list of spare parts and repair tips in accordance with the current Ecodesign Directive can be found by scanning the QR code included with the appliance. Or on the following link: https://auid.connectlife.io.

Disposal of packaging and appliance

This appliance is made from sustainable materials. This appliance must be disposed of in a responsible manner at the end of its service life. Contact the local authorities for information about the method.

INFORMATION!

See also the chapter ‘Disposal’ in the Safety instructions.

The packaging of the appliance is recyclable. The following materials may have been used:

- Cardboard.
- Polyethylene foil (PE).
- CFC-free polystyrene (hard PS foam).

These materials must be disposed of in a responsible manner and in accordance with government regulations.



The appliance is marked with a crossed out wheeled bin symbol to draw your attention to the requirement for the separate disposal of domestic electrical appliances. This means that the appliance may not be disposed of in unsorted household waste at the end of its service life. The appliance must be taken to a special municipal waste processing location for separated waste or to a dealer who provides this service.

Collecting and disposing of domestic appliances separately avoids detrimental consequences for humans and the environment. This ensures that the materials used to make the appliance can be recovered and that substantial savings in the use of energy and raw materials can be achieved.

CE

Declaration of conformity

We hereby declare that our products conform to the applicable European Directives, Regulations and requirements, as well as all requirements in the standards to which reference is made.

Radio equipment type:	MWB414C.07 MWB414S.12
Wi-Fi	
Operating frequency range:	2,412 GHz - 2,472 GHz
Maximum output power:	≤10 dBm/MHz (EIRP) (Antenna gain 10 dBi)
Maximum antenna gain:	Gain: -1,53 dBi
Bluetooth	
Frequency range:	2,402 GHz - 2,480 GHz
Carrier Output:	4 dBm (≤10 dBm)
Emission type:	F1D

Declaration of conformity

The company declares that the device with the function Connectlife complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The detailed Declaration of Conformity can be found at the web address https://auid.connectlife.io on the page of your device among the additional documents.

Your notes

ASKO

The instructions for use can also be found on our website: www.asko.com

969256-a1

CE